

## Wee Rad Corner Shield Installation



# PIONEER

## Corner Shield Fitting Instructions

**PIONEER**  
MANUFACTURING LIMITED

19 Oropuriri Road // New Plymouth 4312  
info@metrofires.co.nz // www.metrofires.co.nz

02/18 © PIONEER MANUFACTURING LTD



## Wee Rad Corner Shield Introduction

The Wee Rad corner clearance 'E' can be reduced to 120mm with the Wee Rad corner shields fitted. When fitting the Wee Rad corner shields, the Wee Rad itself must be installed to a corner clearance 'E' of 120mm. With the corner shields fitted this then gives a wall to shield corner clearance of 100mm.

Please Note: You must fit the corner shields to the Wee Rad prior to installation of the Wee Rad to ensure you have access to drill the mounting holes into the rear heatshield.

### Included in the box:


- 2x Wee Rad corner shields
- 4x 8g self tapping screws

### Tools you will need (not included)



- Power drill with 3.5mm drill bit
- Pliers or similar (to fold tab)
- Pozi-drive screwdriver



Bend tab 90° under the corner shield

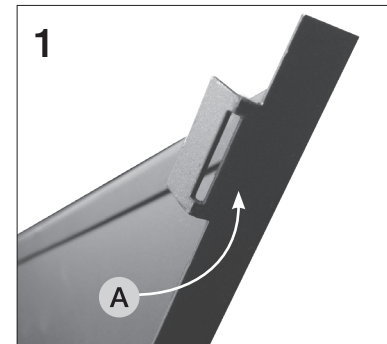

Position shield to rest on side panel and rear heat shield

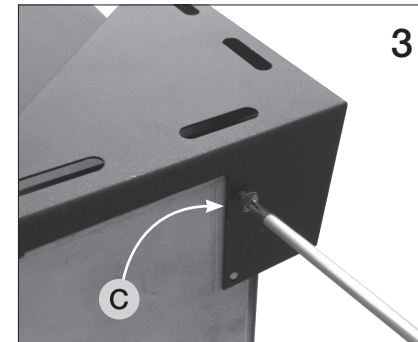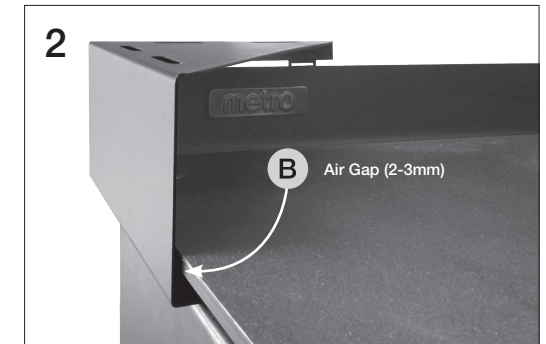

Fix mounting screws through the rear heat shield

Corner shield installation complete

## Wee Rad Corner Shield Fitting Instructions

1. Fold tab 90° under the corner shield. This tab then rests on top of the rear heat shield. Repeat for both corner shields (A).
2. Position the corner shields over both the side panels and rear heatshield as illustrated. The side return of the corner shield sits on the side panel of the Wee Rad. When fitting the corner shields please ensure a small air gap of 2-3mm remains between the inside of the corner shield and top plate of the Wee Rad (B).
3. There are two fixing holes in each corner shield. Once the corner shields are positioned on the Wee Rad, mark the hole locations onto the rear heatshield. Remove the corner shields, and using a 3.5mm drill bit, drill through the rear heatshield. Replace both corner shields and fit the mounting screws supplied. Screw both shields into position.

The Wee Rad can now be installed.